

How to....

Clean your Bermuda feature pump

1)

Ensure pump is turned off



2)

Pull front of pump off



3)

Twist off part holding impellor in place



4)

Pull impellor out of pump



5)

Clean inside around shaft

6)

Clean impellor

7)

Reassemble pump doing the reverse of what you have just done

Regular cleaning of your feature pump will prolong it's life